
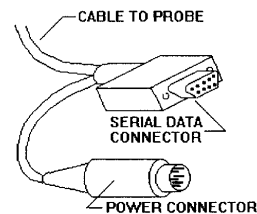
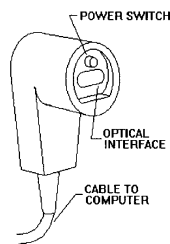
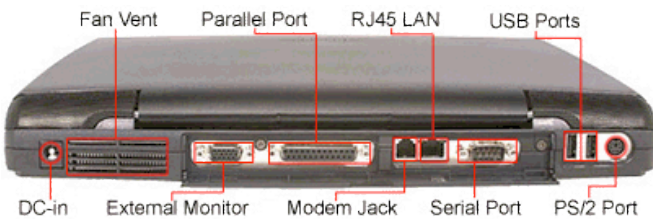


IP500-300, IP250-300 SERIES LAPTOP PROBE CONNECTIONS

1. PLUG PROBE'S DB-9 SERIAL CONNECTOR INTO LAPTOP SERIAL (COM1) PORT
2. VELCRO BATTERY PACK (BP-801) TO LAPTOP LID AS SHOWN ***See Note
3. PLUG PROBE'S POWER CONNECTOR (PS/2) INTO BATTERY PACK JACK (If Battery pack is used as power source) OR PS/2 MOUSE PORT OF PC (sometimes a USB Power Connector is used instead of the PS/2 Connector so plug this connector into any USB port of PC).

***NOTE: BATTERY PACK (2) SHOWN AS OPTIONAL POWER SOURCE FOR PROBE. ONLY NECESSARY WHEN MOUSE (PS/2) PORT NOT AVAILABLE TO CONNECT POWER CONNECTOR (3)

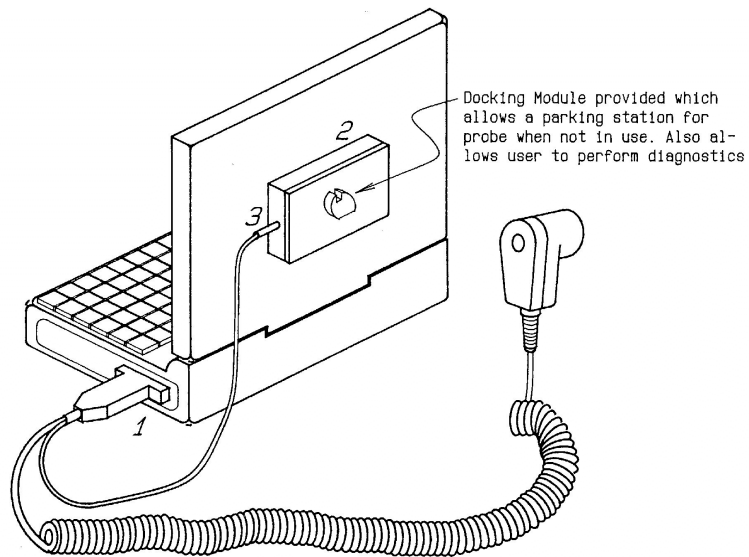

FOR MODELS IP500-301, IP500-308 OR IP500-315 WITH "DTR" SWITCH FOR READING SCIENTIFIC COLUMBUS, JEM METERS AND SOME LANDIS & GYR

