

How to Connect/Disconnect




HIROSE (G5) CONNECTOR

To/From Itron G5, FC200 or FC300 Handheld

Please follow the following steps when connecting/disconnecting the cable hirose (G5) connector to and from the G5, FC200 handheld computer in order to avoid bending or breaking the connector contacts. Following these steps will guarantee an extended life of the optical probe.


A. TO INSERT THE CONNECTOR INTO THE HANDHELD RECEPTACLE

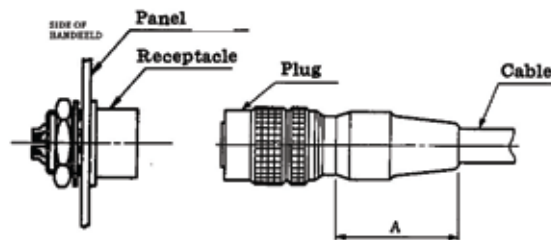

Hold the plug at point A, align the plug guide with the receptacle guide, and push the plug straight. The plug will mate with the receptacle smoothly

****NOTE: DO NOT PUSH PLUG IN UNTIL PROPERLY ALIGNED****

B. TO REMOVE THE CONNECTOR FROM THE HANDHELD RECEPTACLE

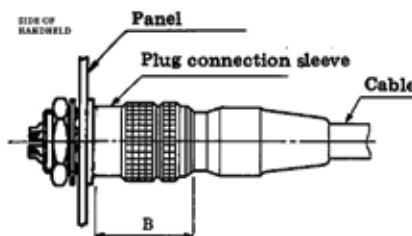

Hold the plug connection sleeve B and pull the sleeve straight. The plug will come off easily.



WWW.INTELLIPROBE.NET
intelliprobe